

TIMPTE

EQUIPMENT TRAILERS

USER MANUAL

1420/1424 Models



TIMPTE

EQUIPMENT TRAILERS

Congratulations on your recent purchase of the TimpTE 1420/1424 Equipment Trailer. Here at TimpTE, we take pride in the quality of our trailers and hope your experience with our company meets all expectations and standards. If at any time you experience issues, please do not hesitate to contact your Authorized Dealer for service or warranty department.



This user's manual contains safety information and operators instructions for your trailer. Make sure to read this manual along with owner's manual prior to loading or towing of trailer. TimpTE advises that all safety precautions and instructions be followed.

Hooking up the tow vehicle



Connect the tow vehicle to the trailer using a 2 5/16" hitch.



Next, attach the trailer safety chains to the tow vehicle.



Connect the trailers electrical hookup to the tow vehicle.

Hooking up the tow vehicle



Attach the break-away safety cable to the tow vehicle.



Release the jack handle by unhooking safety pin from jack.



Next, lower your trailer by cranking jack handle.

Operating 14k Tilt Deck Trailer



Once weight is off of the jack, pull lower jack lever to raise jack plate all the way up. (Keep fingers out of the way of jack plate).



Next, release safety pin on the safety lever and place in forward facing position to allow the trailer to lower to the ground.

Loading the Trailer



If needed, adjust hydraulic pressure on road side of the trailer to allow trailer to lower easier.



Before loading, push down on rear side of the trailer to lower the deck to the ground.



Once lowered, carefully drive your equipment onto trailer.

Loading the Trailer



Drive equipment slightly past the front axles to have proper load distribution on trailer.



Once equipment is loaded, place the safety lever back into its original position and put safety pin back in to remain locked.



After you have secured your safety lever, you have successfully loaded your equipment.

Do not tow trailer without verifying the safety lever is in place. Damage may occur to safety lever during travel.

Safety



While loading and unloading please be cautious near any pinch points.



When loading your equipment make sure to raise the buckets to ensure you do not hit the trailer.

Do not tow trailer without verifying the safety lever is in place. Damage may occur to safety lever during travel.

Service & Maintenance

- ✓ Check wheel lug nut torque to 95 ft/lb at 10, 25, and 50 miles and before each tow.
- ✓ Check wheel bearings for heat and excessive play at 10, 25, and 50 miles and before each tow.
- ✓ Check brake adjustment 200 miles and 3,000 miles.
- ✓ Check drum brakes pads for wear.
- ✓ Check tire pressure before each tow.
- ✓ Lubricate wheel bearings every 12 months or 10,000 miles.
- ✓ Check lights are in working order.
- ✓ Check breakaway switch operation before each tow.

TIMPTE

Since 1884